Z-Tec
Mobility For Life

# "Superior" Rollator

## USER MANUAL

CE

**Available in :**
**ZT-704-BU Blue**
**ZT-704-BG Burgundy**

**Weights, Dimensions, User Weight**

Dimensions open (L x W x H)
77cm x 55cm x 82cm-max.97cm
Dimensions folded (L x W x H)
77cm x 20cm x 82cm-max.97cm
Seat Height from floor 53.5cm
Net Weight 7.3kg
Maximum Rollator User Weight: 100kg
Underseat Shopping Bag—maximum carrying weight 3kg
Maximum Combined User/Bag Weight 103kg
No other accessories should be used with this rollator

**Please ensure that this manual is read and understood before using the rollator.**

## 4. Assembling the Rollator

NOTE: The brakes are factory set & may not require initial adjustment. For technical assistance on the brakes, contact your local Z-Tec dealer.

1. Remove all packaging from the rollator.

2. Fold out the rollator by pushing the seat down until the metal locking clip engages the seat into position (photo A), secure the plastic locking safety C clip onto the front right hand side of the frame as shown in (photo B).

A

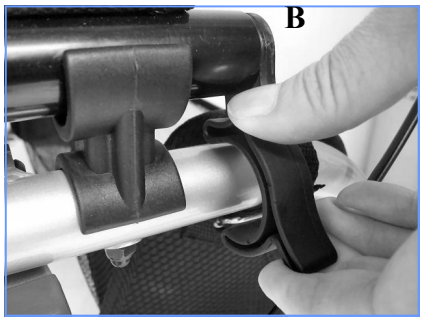
B

3. Insert the handles as shown in (photo C) until the required height of the handles is reached, then locate the black star knob & securely fasten turning the knob clock wise. To re-adjust height of handles, undo the black star knob turning anti-clockwise, then remove and re-adjust to desired height. Locate and retighten black star knob again.

C

4. Your rollator should now look like (photo D) and is Ready for use once you have read the rest of this manual.

D

## 5. Brake Operation & Brake Maintenance

To operate the locking arthritic loop brakes follow points 1 to 3.

1) Brake in walking position.

2) Squeeze both brake levers up at the same time to engage the brakes.

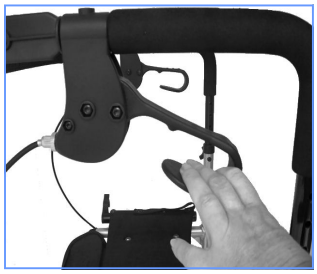

3) To lock the brakes push down both brake levers at the same time until they lock. To unlock pull up brake levers until the lock disengages.

To adjust the braking system release the locking nut & screw out the cable adjuster until the brake arm clears the wheel by approx. 1mm. Retighten locking nut & repeat on other brake mechanism. With both wheels off the ground & the brakes disengaged check that they spin freely & do not rub the brake pad. See photo E

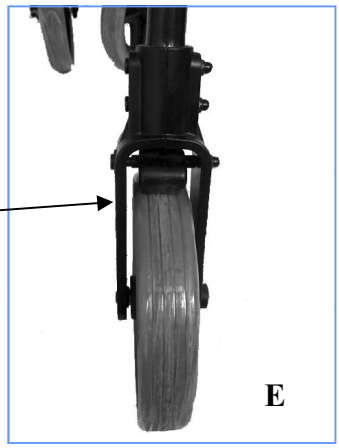
E

## 6. Transportation

To fold the rollator for transportation, flip up the plastic locking safety C clip on the front right hand side of the seat, see photo B, then press down the red locking clip as shown in photo F, lift the seat upwards with both hands as in photo G - the rollator is then ready for Transport as in photo H.

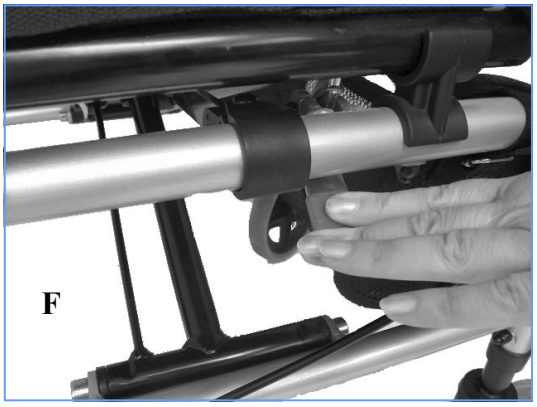
F

G

H

## 7. Maintenance

- Ensure the rollator is used only as an aid for mobility
- Ensure the walker is kept clean. Wipe down with a damp cloth on a monthly basis.
- Check the moving parts (e.g. wheels & height adjustment) monthly.
- Ensure that the brakes are working correctly.
- All the fasteners (screws, nuts & bolts) are to be checked monthly to ensure they are securely tightened.
- Check that the front castor wheels swivel freely. Withdraw from use if they do not work.
- Only use an approved Z-Tec dealer for any maintenance & repairs on your 4 wheel rollator.

## 8. Warranty

To improve the safety & lifespan of your rollator, it is recommended that you have it serviced on a annual basis by an authorised dealer. Z-Tec rollators are guaranteed for 12 months from the date of purchase, this warranty is not transferable. Should any part of the rollator require repair or full or part replacement, as a result of a manufacturing or material defect within the warranty period, parts will be supplied free of charge. The guarantee excludes tyres & all items that have been subjected to undue wear & misuse. Under normal circumstances, no responsibility will be accepted where the rollator has not been maintained in accordance with the manufactures recommendations. This does not affect your statutory rights.

If any other issues arise that are not mentioned in this user manual please write to the address below.

**Disposal**—Contact your local authority to dispose of the rollator when no longer required.

**Z-Tec Mobility**
Unit 1B, Albion Works, Moor Street, Brierley Hill, West Midlands, DY5 3SZ

**(July 10,1)**

## Contents


1. Introduction
2. Parts Description
3. Personal Safety
4. Assembling the Rollator
5. Brake Operation & Brake Maintenance
6. Transportation
7. Maintenance
8. Warranty
9. Weights/Dimensions (front page)


## 1. Introduction

The ZT-704 is a high quality four-wheel rollator available in two powder painted colours. The rollators are designed to aid the user to walk and, as an option, carry items such as shopping.

The rollators are suitable for everyday indoor & outdoor use. They are lightweight & portable whilst offering stability & security to the user.

The ZT-704 rollators are manufactured to the highest quality standards & are CE marked as Medical Devices.

## 2. Parts Description

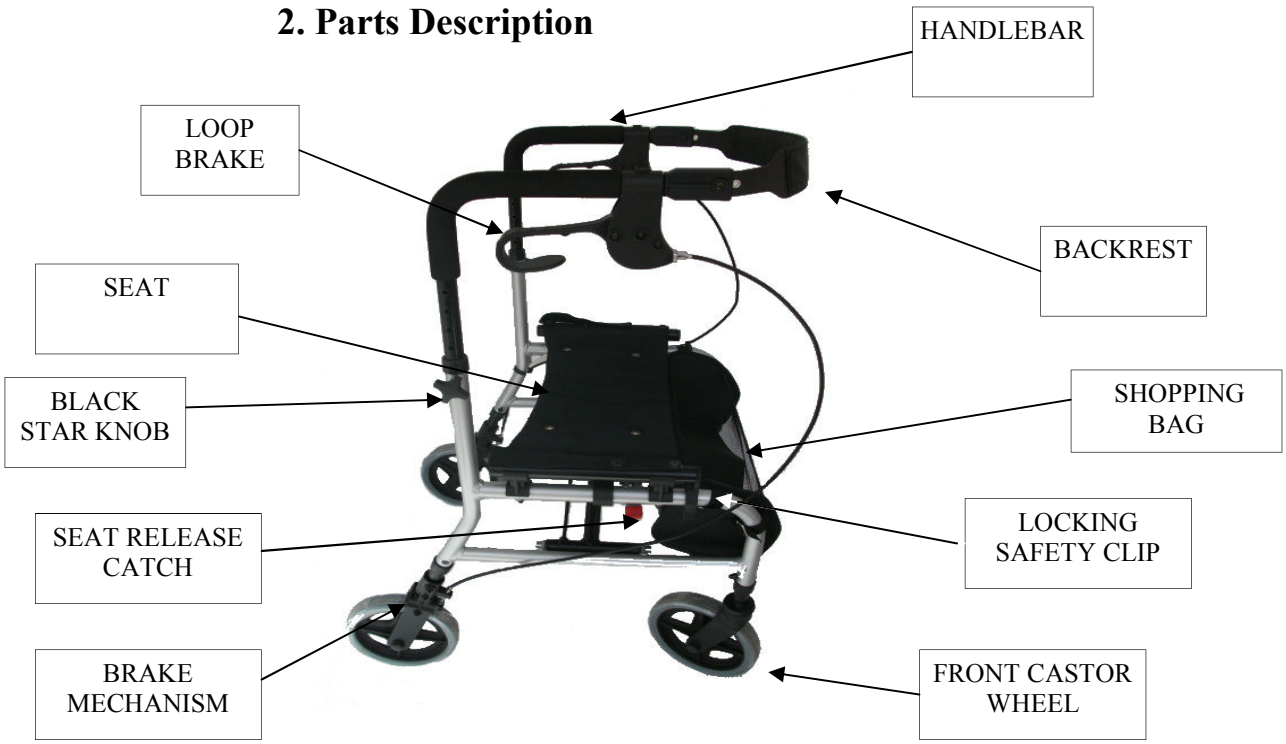


## 3. Personal Safety

- Ensure that the handles are at equal heights & securely locked in position.
- Adopt a comfortable posture so that you can operate the braking mechanism with ease.
- Ensure the rollator is always fully folded out & locked before using.
- Ensure that the braking mechanism is adequate & test before using.
- Ensure that all the wheels are stable & are on the ground before using.
- Ensure that the brakes are always in the locked position before sitting on the seat.
- Ensure that the user sits in the centre of the rollator seat.
- Do not use the rollator on gradients of 7° / 1 in 8 or above
- Ensure that the latest health & safety practice is used for carrying & lifting items.